

AFL Series Pump Air Driven, High Pressure Liquid Pump Operation and Maintenance Manual

Manual: 02-9309ME | April 2022



ENGINEERING YOUR SUCCESS.

Parker Instrumentation Products Divison (IPD)

Live Chat Support is available from <u>www.parker.com/IPD</u> when the Chat icon " 💬 " is visible on screen.

Model #	Order #
Serial #	Mfg. Date
Drawing #	Complete information above for future reference.



FAILURE, IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Parker Hannifin Corporation, its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog.

Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met.

The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Parker Hannifin Corporation and its subsidiaries at any time without notice.

ALL PARKER VALVES MUST PASS A RIGID OPERATIONAL AND LEAKAGE TEST BEFORE LEAVING THE FACTORY. IT IS RECOMMENDED AFTER ANY REASSEMBLY, THE VALVE SHOULD BE TESTED BY THE USER FOR OPERATION AND LEAKAGE. IF THESE INSTRUCTIONS ARE NOT FULLY COMPLIED WITH, THE REPAIRED PRODUCT MAY FAIL AND CAUSE DAMAGE TO PROPERTY OR INJURY TO PERSONS. PARKER HANNIFIN CANNOT ASSUME RESPONSIBILITY FOR PERFORMANCE OF A CUSTOMER SERVICED VALVE.



Product Drawings


Typical Pump Cross Sectional View	4
AFL Pump Dimensional View	5

Operation & Maintenance Information

1.0	Introduction
2.0	Meaning of Safety Words
3.0	Product Specification
4.0	Unpacking 6
5.0	Tools
6.0	Installation7
6.1	Compressed Air Supply7
6.2	Liquid Section
7.0	Pump Start-Up
8.0	Process Media9
9.0	Pump Functionality 10
10.0	Suggested Maintenance 10

Troubleshooting Information

11.0	Repair Kit Options	11
12.0	AFL Series Drawings	12
13.0	Troubleshooting - Pneumatic Section	15
14.0	Trouble Shooting-High Pressure, Liquid Section	16
15.0	Service	16

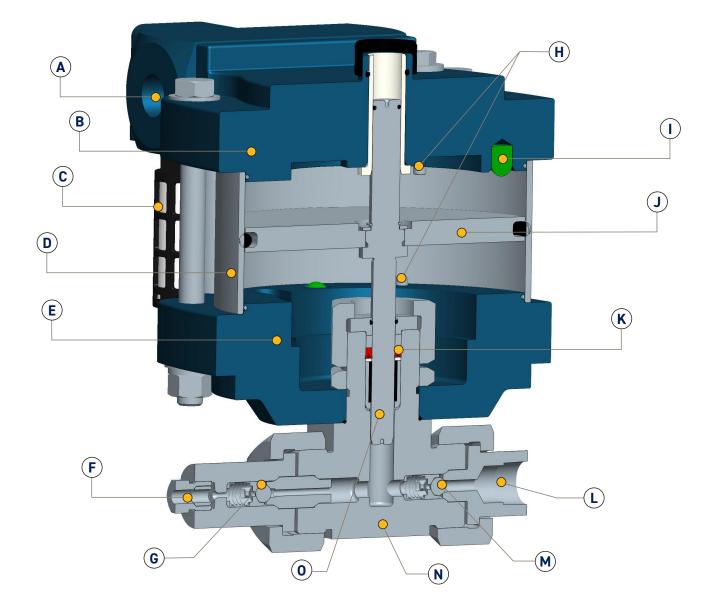


	Description				
А	Air Inlet				
В	Top End Cap				
С	Air Muffler				
D	Air Cylinder				
E	Bottom End Cap				
F	High Pressure Outlet Connection				
G	Outlet Check Valve				
Н	Pilot Valve				

	Description				
Ι	Air Piston Bumper				
J	Air Piston				
K	High Pressure Seal Assembly				
L	Liquid Inlet Connection				
М	Inlet Check Valve				
Ν	Pump Head Body				
0	Hydraulic Plunger				



AFL Pump Dimensional View

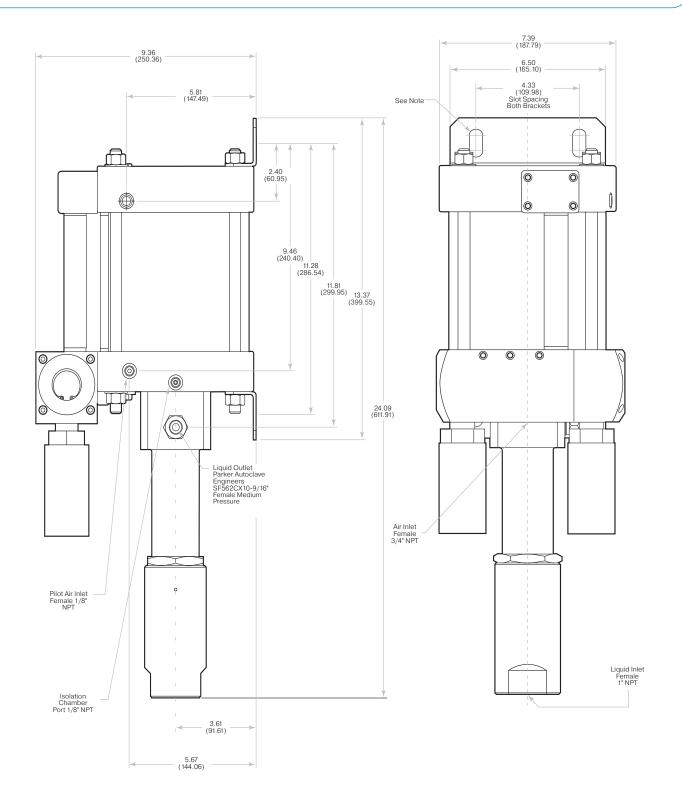

Note:

- Each Mounting Bracket includes (2) 9/16" (14.29) holes for 1/2" Bolts.
- All dimensions are for reference only and are subject to change without notice.
- Primary Dimensions: Inches
- Secondary Dimensions: (Millimeters)



Operation & Maintenance Information

Section 1.0 Introduction

The Parker Autoclave Engineers pump discussed in this manual is operated using compressed air up to 150 psi (10 bar). Autoclave Engineers AFL Series pumps are used for pumping oil, water and oil/water mixtures. Special seals are also available for chemical service. Please contact Parker Autoclave Engineers to discuss availability of special seals. The pump operates using a pressure ratio of the air piston diameter to the liquid plunger diameter. Pumps are available in pressure ranges up to 15,500 PSI (1069 bar).

The pump model number coincides with the approximate nominal ratio of the pump; ex. AFL100-01 is a 113:1 ratio, with an input air of 100 psi the output pressure would amount to 11,300 PSI (779 bar). (Output pressure = actual ratio x input air pressure). Refer to the product literature for the actual air pressure ratio.

Section 2.0 Meaning of Safety Words

A safety related message is identified by a safety alert symbol and a signal word to indicate the level of risk involved with a particular hazard. The definitions of the three signal words are as follows:

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

Special notes intended to bring attention to procedures that must be followed to ensure proper installation and performance will be placed in a box labeled **NOTICE**.

Section 3.0 Product Specifications

See assembly drawing for product specifications:

- Pump Geometry
- Pump Materials of Construction
- Maximum Allowable Working Pressure
- Maximum Working Temperature
- Pressure Ratio
- Displacement
- Repair Kit Part Numbers
- Torque Information
- Weights

Section 4.0 Unpacking

The pump has been assembled and pressure tested at Parker Autoclave Engineers and is ready to be put into service. The shipping carton should be opened and the contents carefully examined upon receipt from the carrier. Make sure there is no obvious damage to the contents. **DO NOT** use the equipment if any damage is evident. If damage has occurred, file a claim with the shipper before contacting Parker Autoclave Engineers Service Department.

Examine all material within the container and check against the packing list to be sure all items are accounted for and are not damaged. Verify that the equipment model number supplied agrees with what was ordered.

Section 5.0 Tools

At minimum, the tools required for installation of the pump include a torque wrench, an open end wrench adapter (crows foot adapter) and an open end adjustable wrench.

Refer to the Tools, Maintenance and Installation Manual provided with the Data Book for information on torque wrenches and torque values for Parker Autoclave Engineers tubing and fittings.

Section 6.0

Installation



Please read this manual in its entirety before attempting to operate an Parker Autoclave Engineers high pressure liquid pump



Installation to be performed only by properly trained individuals.



Proper protective safety gear must be worn while installing and operating the pump.

For best performance and life, the pump should be installed in the vertical position. This will prevent side loading on the air piston seals. The pump will, however, function in any position.

The pump will attach to the mounting location using (4) 1/2" bolts. There are 4 holes provided on each pump for mounting.



Always bolt the pump to a substantially solid surface using the slotted holes provided.



AFL Pumps have a maximum sound level of 87 dBA. Wear hearing protection while working with or near the pump. Section 6.1 Compressed Air Supply

NOTICE

Unless otherwise noted, all air line accessories for the pump air drive should have, at minimum, a 3/4" FNPT connection. The tubing/piping used to connect the components should have the maximum ID the pressure rating will allow. Reducing the size before the air inlet will reduce air pressure flow and reduce flow rate of the pump.

The main air drive connection port on the pump is a female 3/4" FNPT and is located in the spool valve housing. An additional female 1/8" FNPT air pilot valve connection port is located in the bottom cap next to the spool housing. This pilot connection must be plumbed to an unregulated filtered air source. The purpose of this connection is to aid in low pressure differential start-up and restart of the pump while providing a more accurate pressure control. The pump will not function if this unregulated air supply is not connected to the pilot valve port.

The pump is assembled at the factory using permanent synthetic grease in the air drive moving parts.

NOTICE

The use of an air line lubricator is not required and is not recommended. The oil in the air lubricator will cause the factory installed grease to be purged from the pump. Once an air lubricator is used the pump can never again be operated without an air lubricator.

An air line filter with a minimum 5 microns filtration rating must be used on the supply line. If the air supply is not dry, a mist separator must be used to remove moisture in the air line.

The pump is designed to function from 15 psi to 150 psi (1 to 10 bar) air input pressure.



Section 6.2 Liquid Section

All AFL series pumps have a high pressure liquid outlet port located on the side of the pump head. The suction inlet port on all AFL series pumps is positioned at the bottom of the head.

Inlet: A liquid filter with at least a 100 mesh size must be installed before the suction port inlet to prevent damage to the check valves and high pressure seals due to debris.

NOTICE

For best performance, a liquid supply reservoir should be located higher than the inlet gland on the pump to create a small pressure head. Be sure to make an air tight seal between the reservoir and the pump inlet connection. The connections between the reservoir and pump inlet should not be reduced from the 1" FNPT connection size.

The tubing or piping should be made from a corrosion resistant material and sized with a maximum ID to fit the 1" pipe connections.

NOTICE

Restricting flow at the liquid inlet will cause problems with check valve performance and reduce output flow.

Outlet: The outlet tubing ID must, at minimum, match the same size of the pump check valve gland port. Refer to product literature for outlet connections details for each pump. Reducing outlet tubing or connection will reduce output liquid flow capacity.





The high pressure tubing must be rated to at least the maximum pump output pressure.



Verify liquid pressure system is protected with an over pressure relief device.

Section 7.0 Pump Start-Up

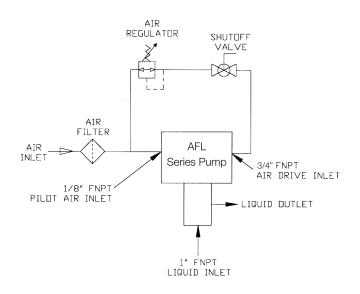



As shown above, a filtered main air supply line is required. The filtered air supply will go to a pressure regulator which can be set to achieve the desired output liquid pressure according to the pressure ratio of the pump.



Use an air pressure regulator to assure maximum air drive pressure listed on the pump label is not exceeded. An air pressure regulator must also be used to assure the pump will not exceed maximum liquid output pressure listed on the pump label.



The pump and high pressure liquid system must be vented prior to installation and start-up.

The pumps unique design allows for self priming. To prime, regulate the air pressure to between 15 psi (1 bar) or lower or use an air flow regulator to reduce to a slow stroke frequency.

With the high pressure side connected to a vented system, allow the pump to cycle until a consistent flow of liquid is achieved. Let the pump flow freely to purge any air in the liquid system. Loosening the outlet gland or pipe can also assist in priming the pump.





Be sure to securely tighten high pressure tube, pipe or gland with the appropriate torque after the priming has been achieved. Reference Tools, Installation, Operation and Maintenance Manual for tube gland torque value.

Increase the air pressure using the air pressure regulator until you achieve your desired output liquid pressure. At this point the pump will stall. You can calculate the output pressure by multiplying the input air supply by the actual pressure ratio of the pump. The pump will automatically restart if there is a drop in downstream high pressure.



DO NOT exceed the maximum liquid pressure and temperature rating specified on the assembly drawing and label for your pump.

It is recommended to use a liquid relief valve or rupture disk to prevent over pressurization of your high pressure system.

DO NOT exceed the maximum air drive pressure listed on your pump label.

Section 8.0 Process Media

Parker Autoclave Engineers pumps discussed in this manual are used for pumping oil, water and oil/water mixtures. Special seals are also available for chemical service. Please contact Parker Autoclave Engineers to discuss availability of special seals.



While testing has shown o-rings to provide satisfactory service life, actual life will vary widely with differing service conditions, properties of reactants, pressure and temperature cycling and age of the o-ring.

FREQUENT INSPECTIONS SHOULD BE MADE

to detect any deterioration and o-rings replaced as required.



The user is required to verify material compatibility with fluid based on corrosion resistance. A material list is provided on the assembly drawing to aid you in the evaluation.

Pumps are not designed to run for long periods of time without liquid process media. Short, dry pumping cycles should not be a cause for concern. However, pumps are built using lubricant in the seal areas and pumping without fluid will wear away lubricant and compromise the seal.

The operating temperatures of the pump are between 0°F to 140°F (18°F to 60°F).



Section 9.0 Pump Functionality

When the pump is installed, maximum system air is connected to 1/8" FNPT pilot air inlet and is sealed off by pilot valve assembly in the top end cap and does not enter the spool housing. Regulated air is connected to the spool housing at the 3/4" FNPT pump inlet.

- 1. Regulated inlet air pressure enters spool housing and moves spool to the left directing air into large pressure tube to the bottom end cap pushing the air piston and liquid plunger upward.
- 2. The upward movement causes a suction of liquid into the high pressure pump head while inlet check valve is open and outlet check valve is closed. The outlet check valve and a second hydraulic seal attached to plunger allows liquid in the head to be compressed and high pressure to flow during the suction stroke.
- 3. The air piston continues to move up until it hits the pilot valve assembly in the top end cap.
- 4. The top pilot valve opens allowing max system air pressure to shift the spool valve so that it now directs air drive pressure through the top end cap and pushes the air piston and liquid plunger downward.
- 5. The plunger action moving down compresses the fluid on the high pressure pump head while the inlet check valve is closed and outlet check valve is open to allow high pressure flow.
- 6. While the air drive pressure is acting on top of the piston, the bottom area of the piston is vented through the exhaust muffler.
- 7. Piston continues to move down until it hits the pilot valve assembly in the bottom end cap.
- 8. The bottom pilot opens which vents max system air pressure from the large diameter side of the spool.
- 9. This causes spool to move to the left, while air is vented from the top end of the air cylinder through the exhaust muffler.
- 10. The entire process starts again at step one until the maximum outlet hydraulic pressure in reached based on the pressure ratio of the pump.

Section 10.0 Suggested Maintenance



All pumps must be inspected periodically in order to assure proper and safe operating condition. Failure to inspect pump can result in serious and catastrophic harm to personnel and the surrounding facility.

- A. Before each pump use, a quick inspection should be performed to insure there are no loose bolts, nuts, set screws or check valve glands. Tighten any lose bolts and fittings according to the torque values listed on the pump assembly drawing. A visual inspection should also be made before each use and at startup to make sure there is no evidence of fluid leaks from isolation chamber drain ports, check valves connections and muffler. If liquid mists out of the muffler for more than 5 strokes, it is time to replace your hydraulic high pressure seals. Refer to the troubleshooting guide for solutions to these fluid leaks.
- B. The maintenance schedule of the pump depends on the frequency of use, cleanliness of media, type of media, cycle rates, output pressures, cleanliness of air or any other conditions that may be damaging to seal integrity. Once a clear pattern develops of how long a pump is in service before pump performance declines, it is recommended to perform maintenance in advance of this time frame. At minimum, perform maintenance on the pump once a year as described below.

Maintenance would include:

- Re-lubrication or replacement of spool valve o-ring
- Re-lubrication or replacement of air drive seals
- Re-lubrication or replacement of pilot valve o-rings and gaskets
- Replace check valve components
- Replace high pressure hydraulic seals

C. Maintenance instructions are supplied with appropriate rebuild kits. Kit part numbers are listed on the assembly drawing.



Before attempting to disassemble the pump or loosen fittings in a pressure system, be sure that liquid pressure has been totally vented.




Before attempting to perform maintenance on the pump, assure that air supply pressure is shut off and vented from the pump.


	Se	ction 1	1.0	
AFL S	Series	Repair	Kit	Options

Pump Model Number	O-Ring Material	Spool Valve Kit	Pilot Valve Kit	Air Drive Kit	Hydraulic Seal Upper	Inlet Check Valve Kit	Outlet Check Valve w/ Seal	Full Rebuild Kit
AFL35-1DBCPB	Buna-N	RS-AFL	RP-AFL	RA-AFL	RH-AFL35-P	RC-12-B	RC-15	RF-AFL35-1DCPB
AFL35-1DBCPC	FFKM	RS-AFL	RP-AFL	RA-AFL	RH-AFL35-P	RC-12-C	RC-15	RF-AFL35-1DCPC
AFL35-1DBCPV	FKM	RS-AFL	RP-AFL	RA-AFL	RH-AFL35-P	RC-12-V	RC-15	RF-AFL35-1DCPV
AFL60-1DBCPB	Buna-N	RS-AFL	RP-AFL	RA-AFL	RH-AFL60-P	RC-12-B	RC-14	RF-AFL35-1DCPB
AFL60-1DBCPC	FFKM	RS-AFL	RP-AFL	RA-AFL	RH-AFL60-P	RC-12-C	RC-14	RF-AFL35-1DCPC
AFL60-1DBCPV	FKM	RS-AFL	RP-AFL	RA-AFL	RH-AFL60-P	RC-12-V	RC-14	RF-AFL35-1DCPV
AFL100-1DBCPB	Buna-N	RS-AFL	RP-AFL	RA-AFL	RH-AFL100-P	RC-12-B	RC-13	RF-AFL35-1DCPB
AFL100-1DBCPC	FFKM	RS-AFL	RP-AFL	RA-AFL	RH-AFL100-P	RC-12-C	RC-13	RF-AFL35-1DCPC
AFL100-1DBCPV	FKM	RS-AFL	RP-AFL	RA-AFL	RH-AFL100-P	RC-12-V	RC-13	RF-AFL35-1DCPV


Section 12.0 AFL35-10 Series Pump Drawing

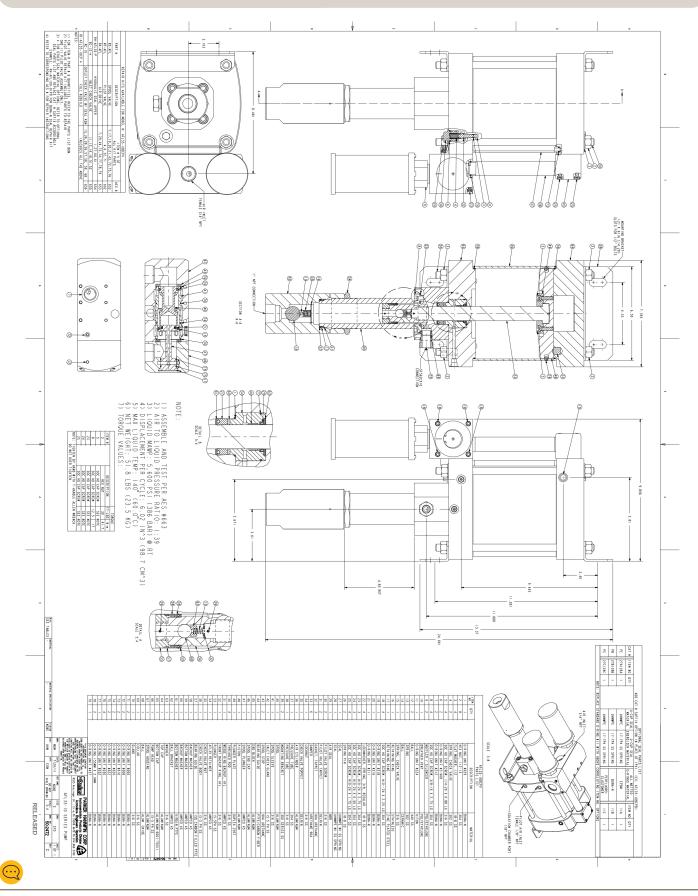

Section 12.0 AFL60-10 Series Pump Drawing

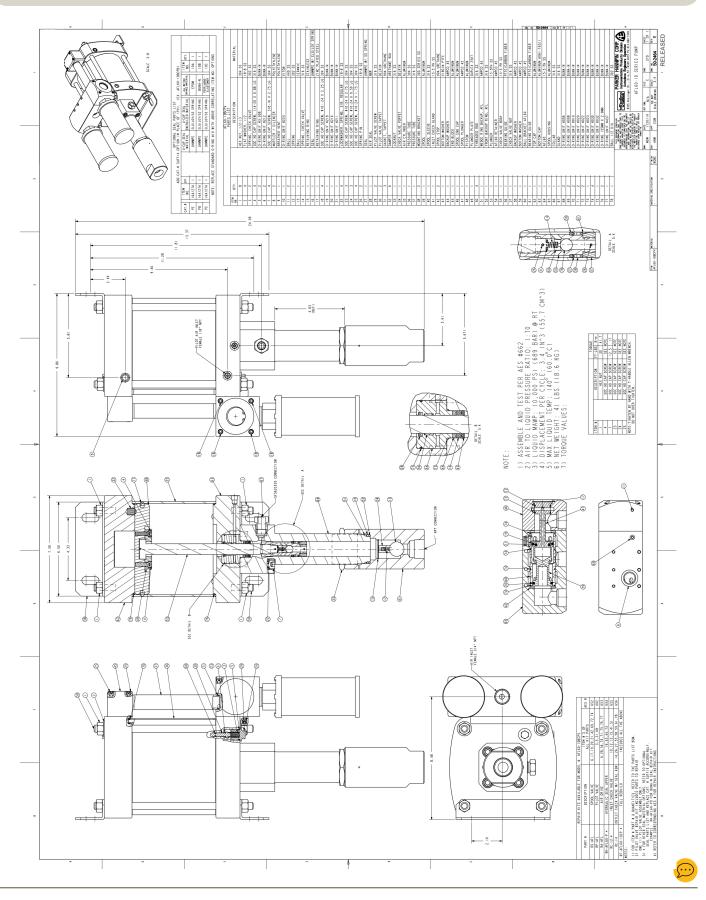

Section 12.0 AFL100-10 Series Pump Drawing

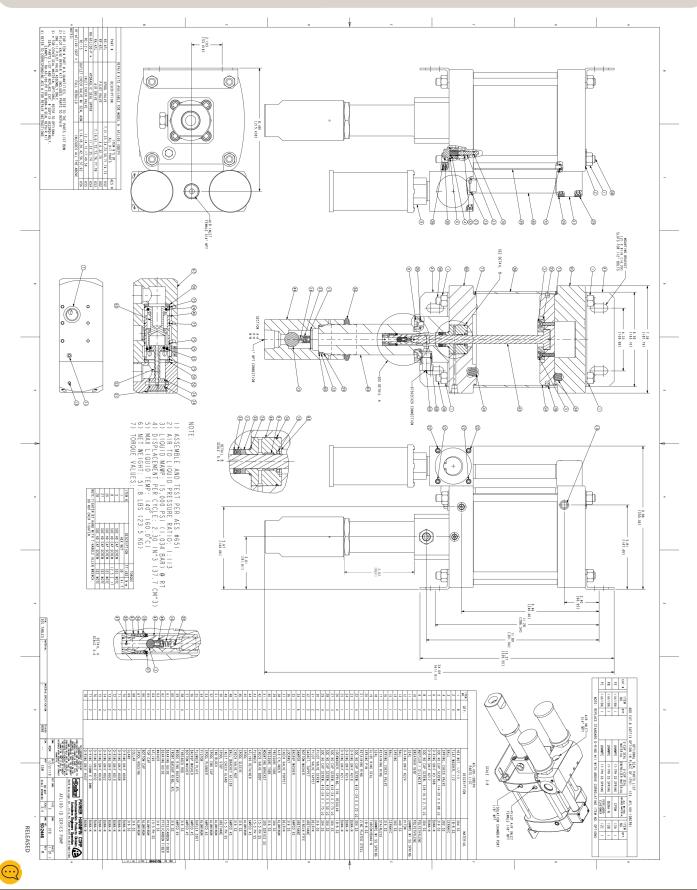

Troubleshooting

Ta	Section 13.0	Problem:	Pump will not run and air escapes through the pilot valve vent in the bottom end cap
In	oubleshooting - Pneumatic Section	Cause:	Pilot valve gasket or o-ring is not sealing in the bottom cap.
Problem:	Pump will not operate with low air pressure.	Solution:	Replace and lubricate pilot valve gasket
Cause:	Excessive friction of o-rings on the spool valve has increased the pressure required to move spool.		and o-ring. If necessary, also replace the tappet rod.
Solution:	Replace and lubricate the o-rings on spool		
		Problem:	Pump operates at a high frequency and short strokes.
		Cause:	The top or bottom pilot valves are defective.
Problem:	Pump can only be actuated at high air pressure.	Solution:	Replace and lubricate both pilot valve gaskets and o-rings. If necessary also
Cause:	 a) Air is leaking through the o-rings between the top end cap and air cylinder. 		replace the tappet rod.
Solution:	 Replace and lubricate o-ring on lip of top end cap. 		
		Problem:	Air leaking at isolation chamber drain connection.
		Cause:	The rod seal in the separation plate is
Problem:	Pump will not run and air escaped through the exhaust muffler.		leaking.
0		Solution:	Replace and lubricate both the o-ring and rod seal assembly.
Cause:	a) Spool valve o-rings are leaking.		
	b) Spool sleeve o-rings are leaking.		
	c) Outside o-ring(s) on air piston(s) is leaking.	Droblom	Dump functions cloudy or depart't operate
	 d) Seal between air piston and liquid plunger is leaking. 	Problem:	Pump functions slowly or doesn't operate at all.
Solution:	a) Replace and lubricate spool valve o-rings.	Cause:	 a) Condensation from air supply is freezing the spool valve.
	b) Replace and lubricate sleeve o-rings.		b) Air muffler is clogged.
	c) Replace and lubricate air piston o-ring(s).	Solution:	a) Stop pump for a short period and
	d) Replace o-ring on bottom plunger (two	Solution.	replace or add a mist separator in the air line.
	piece plunger designs), or add Loctite 2760 thread locker with sealant on plunger threads (one piece plunger designs).		b) Clean or replace air muffler.

Section 14.0 Troubleshooting - High Pressure, Liquid Section

Problem: Pump does not produce liquid flow, operates irregularly or does not maintain pressure.

- Cause: a) Air in the hydraulic system.
 - b) Suction line excessively long.
 - c) Suction tubing sized too small.
 - d) Failure of one of the check valves.
 - e) Liquid inlet filter is blocked.
 - f) High pressure seal excessively worn.
- Solution: a) Check inlet suction line and connections for leaks and allow pump to flow freely downstream so as to remove any air.
 - b) Shorten liquid supply line.
 - c) Increase tubing ID size between reservoir and pump inlet.
 - d) Clean or replace both inlet and outlet check valve assemblies.
 - e) Clean or replace liquid inlet filter.
 - f) Replace high pressure seal assembly.
 - g) Replace o-ring in pump head.

Section 15.0 Service

Parker Autoclave Engineers now require all pump repair be sent to an authorized repair facility. Contact Parker Autoclave Engineers for recommendations.

Pumps returned for service should be accompanied with the model number, serial number, manufacture date and problems you are experiencing.

Use only originally specified parts when installing or maintaining high-pressure equipment and follow all Parker Autoclave Engineers maintenance and assembly procedures. Do not use any parts from other equipment to make repairs or modifications. Contact Parker Autoclave Engineers with any questions or if sufficient information to complete the installation, maintenance and operation of the equipment has not been included.

Problem: Pump operates at a high frequency and short strokes.

- Cause: High pressure seal is leaking.
- Solution: Replace high pressure seal.



Maintenance Notes	

Maintenance Notes	

Parker's Motion & Control Technologies

At Parker, we're guided by a relentless drive to help our customers become more productive and achieve higher levels of profitability by engineering the best systems for their requirements. It means looking at customer applications from many angles to find new ways to create value. Whatever the motion and control technology need, Parker has the experience, breadth of product and global reach to consistently deliver. No company knows more about motion and control technology than Parker. For further information call 1-800-C-Parker.

MARKET		KEYMA	ARKETS	KEY PRODUCTS			
	AEROSPACE	Aircraft Engines Commercial Commerical Transports Military Aircraft Regional Transports	Business and General Aviation Land-Based Weapons Systems Missiles and Launch Vehicles Unmanned Aerial Vehicles	Flight Control Systems & Components Fluid Conveyance Systems Fluid Metering Delivery & Atomization Devices Fuel Systems & Components	Hydraulic Systems & Com- ponents Inert Nitrogen Generating Systems Pneumatic Systems & Com- ponents Wheels & Brakes		
	CLIMATE CONTROL	Agriculture Food, Beverage and Dairy Precision Cooling Transportation	Air Conditioning Life Sciences & Medical Processing	Co2 Controls Electronic Controllers Filter Driers Hand Shut-Off Valves Hose & Fittings	Pressure Regulating Valves Refrigerant Distributors Safety Relief Valves Solenoid Valves Thermostatic Expansion Valves		
	ELECTRO- MECHANICAL	Aerospace Life Science & Medical Packaging Machinery Plastics Machinery & Converting Semiconductor & Electronics Factory Automation	Machine Tools Paper Machinery Primary Metals Textile Wire & Cable	AC/DC Drives & Systems Electric Actuators, Gantry Robots & Slides Electrohydrostatic Actuation Systems Electromechanical Actuation Systems Human Machine Interface	Linear Motors Stepper Motors, Servo Mo- tors Drives & Controls Structural Extrusions		
	FILTRATION	Food & Beverage Life Sciences Mobile Equipment Power Generation Transportation	Industrial Machinery Marine Oil & Gas Process	Analytical Gas Generators Compressed Air & Gas Filters Condition Monitoring Engine Air, Fuel & Oil Filtration & Systems	Hydraulic, Lubrication & Cool- ant Filters Process, Chemical, Water Microfiltration Filters Nitrogen, Hydrogen & Zero Air Generators		
	FLUID and GAS HANDLING	Aerospace Agriculture Bulk Chemical Handling Construction Machinery Food & Beverage Fuel & Gas Delivery	Industrial Machinery Mobile Oil & Gas Transportation Welding	Brass Fittings & Valves Diagnostic Equipment Fluid Conveyance Systems Industrial Hose	PTFE & PFA Hose, Tubing & Plastic Fittings Rubber & Thermoplastic Hose & Couplings Tube Fittings & Adapters Quick Disconnects		
	HYDRAULICS	Aerospace Aerial lift Agriculture Construction Machinery Forestry	Industrial Machinery Mining Oil & Gas Power Generation & Energy Truck Hydraulics	Diagnostic Equipment Hydraulic Cylinders & Ac- cumulators Hydraulic Motors & Pumps Hydraulic Systems Hydraulic Valves & Controls	Power Take-Offs Rubber & Thermoplastic Hose & Couplings Tube Fittings & Adapters Quick Disconnects		
	PNEUMATICS	Aerospace Conveyor & Material Handling Factory Automation Life Science & Medical	Machine Tools Packaging Machinery Transportation & Automotive	Air Preparation Brass Fittings & Valves Manifolds Pneumatic Accessories Pneumatic Actuators & Grip- pers Pneumatic Valves & Controls	Quick Disconnects Rotary Actuators Rubber & Thermoplastic Hose & Couplings Structural Extrusions Thermoplastic Tubing & Fittings Vacuum Generators, Cups & Sensors		
	PROCESS CONTROL	Chemical & Refining Food, Beverage & Dairy Medical & Dental	Microelectronics Oil & Gas Power Generation	Analytical Sample Condition- ing Products & Systems Fluoropolymer Chemical Delivery Fittings, Valves & Pumps High Purity Gas Delivery Fit- tings, & Valves & Regulators	Instrumentation Fittings, Valves Regulators Medium Pressure Fittings & Valves Process Control Manifolds		
	SEALING and SHIELDING	Aerospace Chemical Processing Consumer Energy, Oil & Gas Fluid Power General Industrial	Information Technology Life Sciences Military Semiconductor Transportation	Dynamic Seals Elastomeric O-Rings Emi Shielding Extruded & Precision-Cut, Fabricated Elastomeric Seals	Homogeneous & Inserted Elastomeric Shapes High Temperature Metal Seals Metal & Plastic Retained Composite Seals Thermal Management		

Parker Worldwide

North America

USA – Corporate, Cleveland, OH Tel: +1 256 896 3000

USA – IPD, Huntsville, AL Tel: +1 256 881 2040 ipdcct@parker.com

USA – IPD, (Autoclave), Erie, PA Tel: +1 814 860 5700 ipdaecct@parker.com

CA – Canada, Grimsby, Ontario Tel +1 905-945-2274 ipd_canada@parker.com

South America

AR – Argentina, Buenos Aires Tel: +54 3327 44 4129 falecom@parker.com

BR – Brazil, Diadema, SP Diadema, SP Tel: +55 11 4360 6700 falecom@parker.com

CL – Chile, Santiago Tel: +56 (0) 2 2303 9640 falecom@parker.com

MX – Mexico, Toluca Tel: +52 722 275 4200 contacto@parker.com

Asia Pacific

AU – Australia, Dandenong Tel: +61 (0)2 9842 5150 customer.service.au@parker.com

CN – China, Shanghai Tel: +86 21 2899 5000 INGtechnical.china@parker.com

HK – Hong Kong Tel: +852 2428 8008

IN – India, Mumbai Tel: +91 22 6513 7081-85

ID – Indonesia, Tangerang Tel: +62 2977 7900 parker.id@parker.com

JP – Japan, Tokyo Tel: +(81) 3 6365 4020 infophj@parker.com KR – South Korea, Seoul

Tel: +82 2 559 0400 parkerkr@parker.com

MY – Malaysia, Selangor Tel: +603 784 90 800 parkermy@parker.com

SG – Singapore, Tel: +65 6887 6300 parkersg@parker.com

TH – Thailand, Bangkok Tel: +66 2 186 7000 phthailand@parker.com

TW – Taiwan, Taipei Tel: +886 2 2298 8987 enquiry.taiwan@parker.com

VN – Vietnam, Hochi Minh City Tel: +848 382 508 56 parker_viet@parker.com

Europe, Middle East, Africa

AE – UAE, Dubai Tel: +971 4 812 7100 parker.me@parker.com

AT – Austria, Wiener Neustadt Tel: +43 (0)2622 23501-0 parker.austria@parker.com

AT – Eastern Europe, Wiener Neustadt Tel: +43 (0)2622 23501 900 parker.easteurope@parker.com

AZ – Azerbaijan, Baku Tel: +994 50 2233 458 parker.azerbaijan@parker.com

BE/LU – Belgium, Nivelles Tel: +32 (0)67 280 900 parker.belgium@parker.com

BG – Bulgaria, Sofia Tel: +359 2 980 1344 parker.bulgaria@parker.com

BY – Belarus, Minsk Tel: +48 (0)22 573 24 00 parker.belarus@parker.com

CH – Switzerland, Etoy Tel: +41 (0) 21 821 87 00 parker.switzerland@parker.com

CZ – Czech Republic, Klecany Tel: +420 284 083 111 parker.czechrepublic@parker.com

DE – Germany, Kaarst Tel: +49 (0)2131 4016 0 parker.germany@parker.com

DK – Denmark, Ballerup Tel: +45 43 56 04 00 parker.denmark@parker.com **ES** – Spain, Madrid Tel: +34 902 33 00 01 parker.spain@parker.com

FI – Finland, Vantaa Tel: +358 (0)20 753 2500 parker.finland@parker.com

FR – France, Contamine s/Arve Tel: +33 (0)4 50 25 80 25 parker.france@parker.com

GR – Greece, Athens Tel: +30 210 933 6450 parker.greece@parker.com

HU – Hungary, Budapest Tel: +36 223 885 470 parker.hungary@parker.com

IE – Ireland, Dublin Tel: +353 (0)1 466 6370 parker.ireland@parker.com

IT – Italy, Corsico (MI) Tel: +39 02 45 19 21 parker.italy@parker.com

KZ – Kazakhstan, Almaty Tel: +7 7273 561 000 parker.easteurope@parker.com

NL – The Netherlands, Oldenzaal Tel: +31 (0)541 585 000 parker.nl@parker.com

NO – Norway, Stavanger Tel: +47 66 75 34 00 parker.norway@parker.com

PL – Poland, Warsaw Tel: +48 (0)22 573 24 00 parker.poland@parker.com **PT** – Portugal, Leca da Palmeira Tel: +351 22 999 7360 parker.portugal@parker.com

RO – Romania, Bucharest Tel: +40 21 252 1382 parker.romania@parker.com

RU – Russia, Moscow Tel: +7 495 645-2156 parker.russia@parker.com

SE – Sweden, Spånga Tel: +46 (0)8 59 79 50 00 parker.sweden@parker.com

SK – Slovakia, Banská Bystrica Tel: +421 484 162 252 parker.slovakia@parker.com

SL – Slovenia, Novo Mesto Tel: +386 7 337 6650 parker.slovenia@parker.com

TR – Turkey, Istanbul Tel: +90 216 4997081 parker.turkey@parker.com

UA – Ukraine, Kiev Tel: +48 (0)22 573 24 00 parker.ukraine@parker.com

UK – United Kingdom, Warwick Tel: +44 (0)1926 317 878 parker.uk@parker.com

ZA – South Africa, Kempton Park Tel: +27 (0)11 961 0700 parker.southafrica@parker.com

© 2022 Parker Hannifin Corporation | Instrumentation Products Division

Autoclave Engineers



1005 A Cleaner Way Huntsville, AL 35805 USA Tel: 256.881.2040 Fax: 256.881.5072

www.Parker.com/IPD

Questions? Chat with Us, click on 💬

8325 Hessinger Drive Erie, PA 16509 USA Tel: 814 860 5700 Fax: 814 860 5811

www.Autoclave.com

02-9309ME April 2022

Instrumentation Products Division

Operation and Maintenance Manual **AFL Series: Liquid Pumps**